



Joyusing Technology Co.,Ltd



BOOK SCANNER

SOFTWARE USER MANUAL


Website: www.joyusing.com
Email: Support@joyusing.com
Online Store: store.joyusing.com

1. System Requirements


Support XP / Win7 / Win8 / Win10 (32 bits and 64 bits)

2. Installing Software


Run the client software installation program, then the following prompt box will pop up for the user to select the installation language. Chinese or English is optional here. Select what you want and then continue to go.

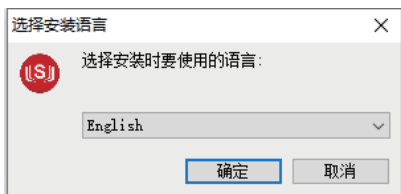


Choose what you want and then continue to go. As for information of software overview, please click [I accept the agreement]. Then click [next] to go.

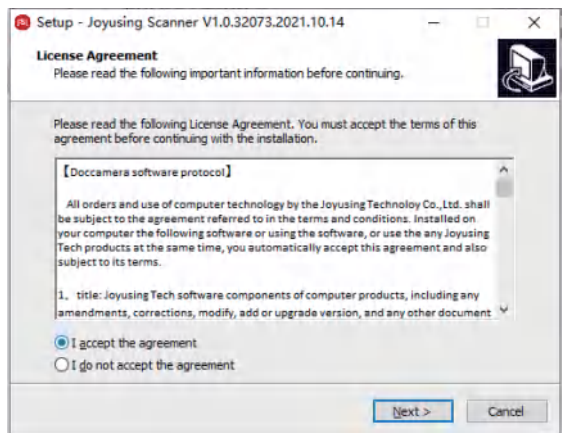


Coming to the set up, please click [next] to proceed.

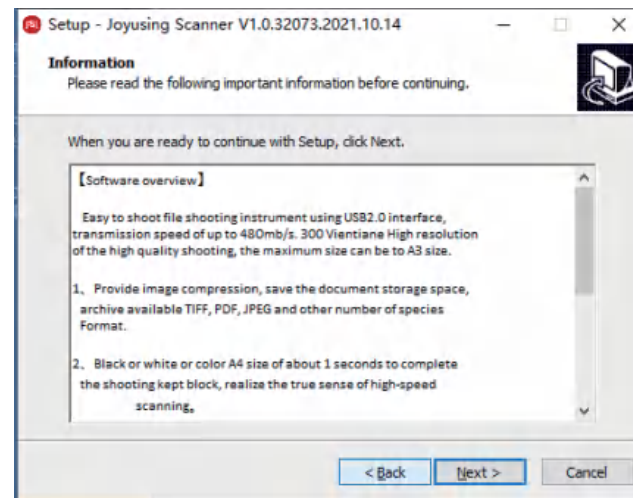


Then, please select destination location for your downloaded software.

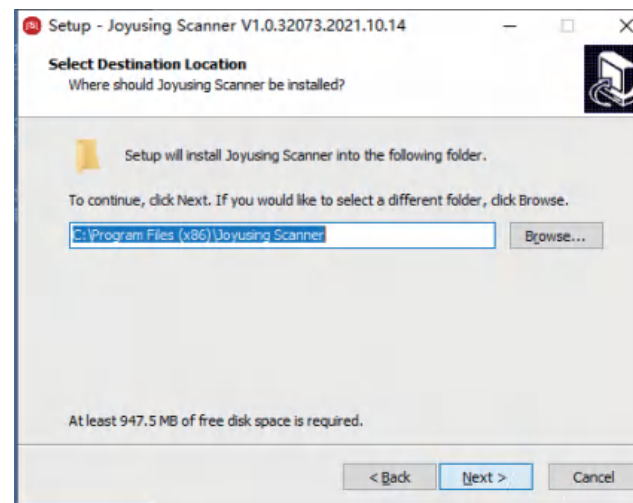


Clicking [Next] will create the program's shortcut in the system Start Menu:

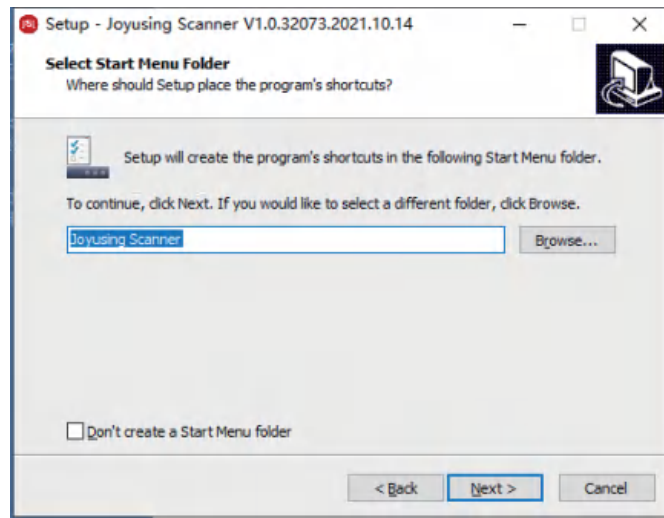


Clicking [Next] after setting will let the user select additional shortcuts. If necessary, please choose what you want.

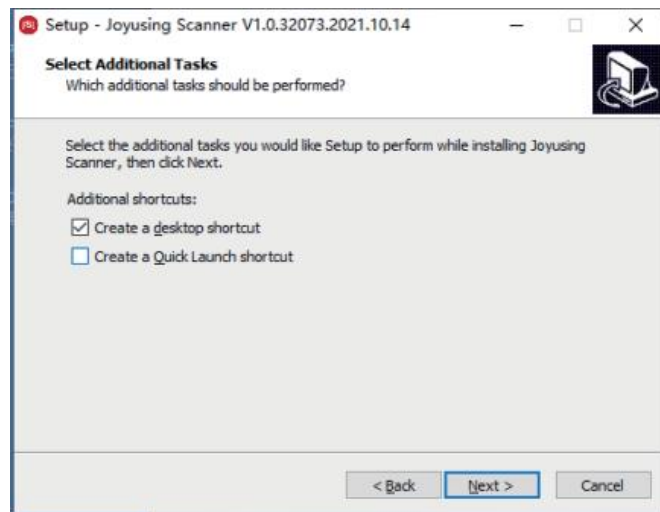


The window of ready to install shows the relevant previous settings.

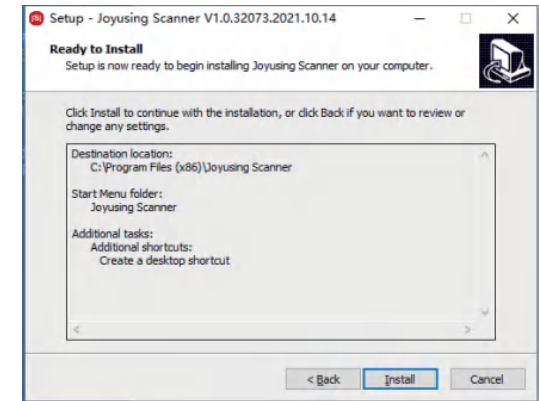

Click [Install] to start installing the software. It will take some time for the installation please be patient.

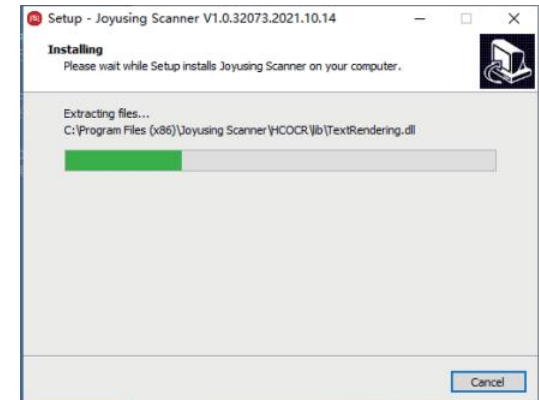

Installation finished, you will see the following interface. You may check Launch Joyusing Scanner and click [Finish] to end.

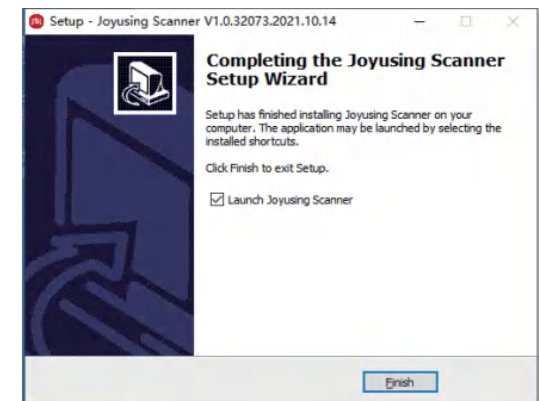

3. Functions


3.1 Software Startup

Installation finished, you can double click the shortcut to enter the following main interface.



3.2 Main Interface

Main Interface Functions: Book Scanner, File Processing, Document Camera. By enabling the software, you will be allowed in the file processing function by default. The rest functions of the book scanner and document camera have bound device ID, which is available only by Joyusing products.

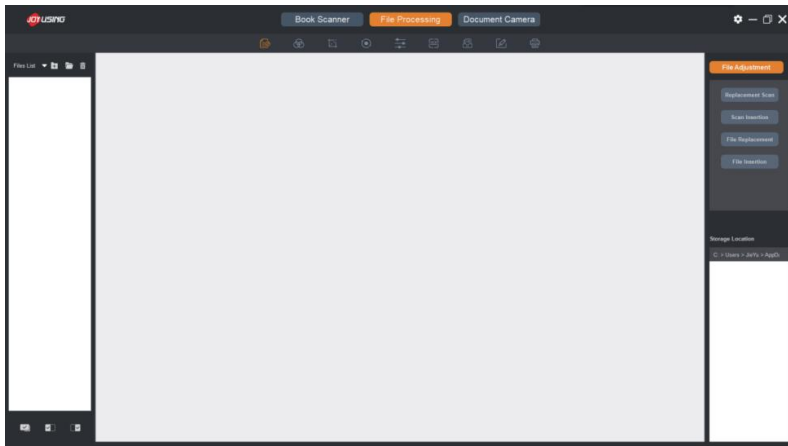


3.3 File Processing

File Processing: The scanned images and the imported documents from the computer are available.


Batch Processing: File adjustment Color mode, Crop, Rotation Contrast, OCR, unified format, Rename print, return to previous/next step.

▶ 3.3.1 Batch Processing



Document Adjustment


The document adjustment has great versatility, including replacement scan, scan insertion file replacement, and file insertion. It is also a toggle key for single processing and batch processing.

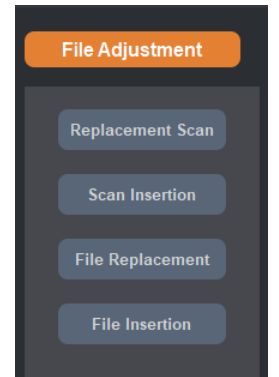




Color Mode

You can click the Color mode for selected images, including Color Mode, B&W Mode, Gray Mode, Stamp Seal Mode, Anti-counterfeiting(for better safety of ID, Passport). For example, select B&W mode, and then confirm it.

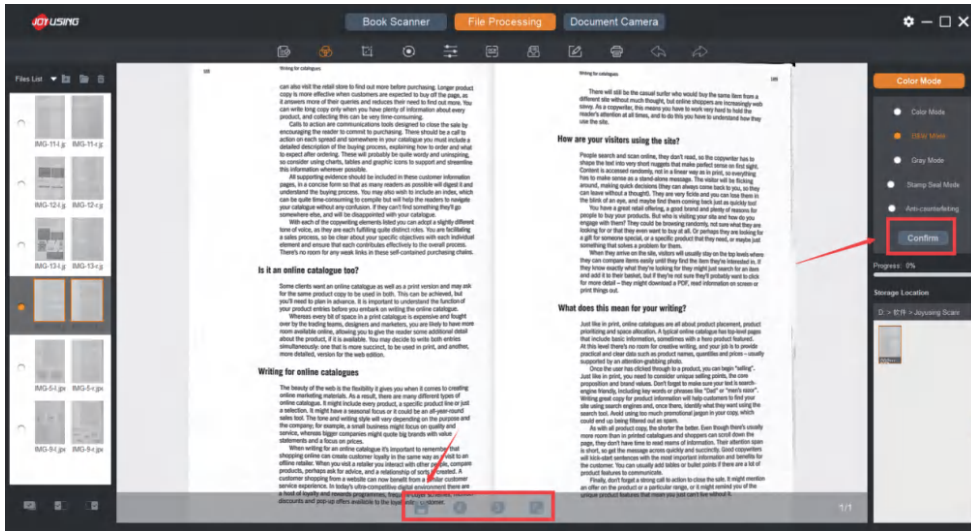


Document Cropping

Directly manual cropping for the selected file is available by dragging the border of the image. The up, down, left, and right values on the right side will also be changed according to the cropping. Professional cutting: After adjusting the parameters of the right parameter table, the cutting range will be directly modified, and the left and right pages will be the same.

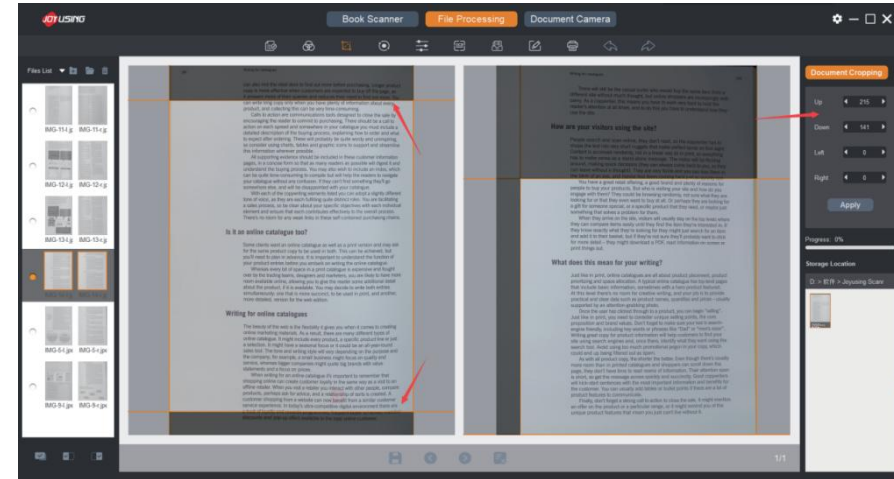

Document Rotation


Rotate the selected file at different rotation angles, including No Change, 90°CW Rotation, 90°CCW Rotation, 180°Rotation, Flip Vertically, Flip Horizontally. For example, select the 90°CW Rotation :

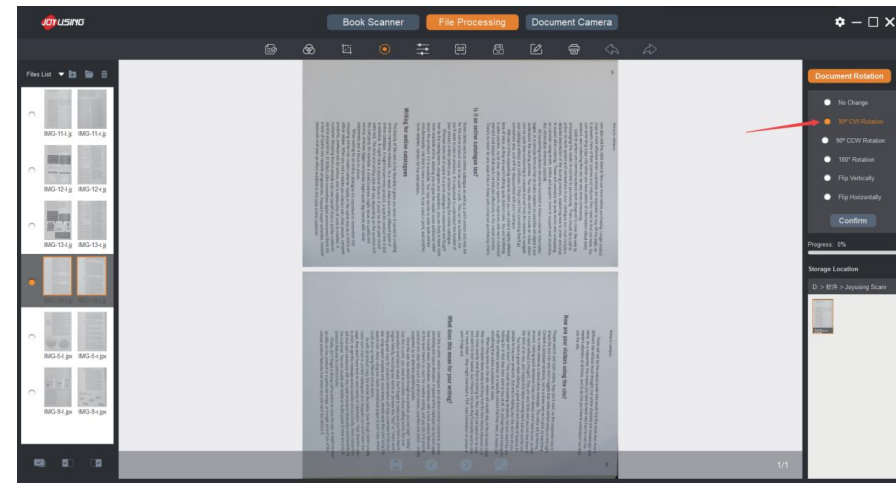


Color Balance

Adjusts the color balance for the selected file, including Exposure Hue, Saturation, Contrast Sharpness.

Before the adjustment: ▼

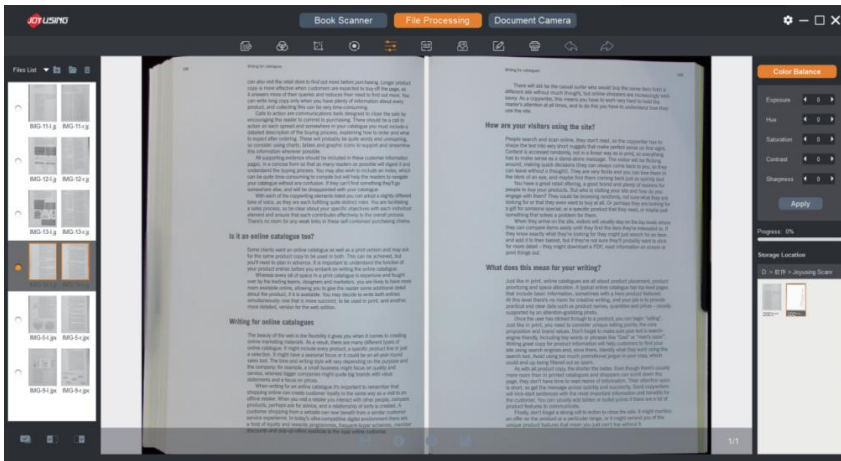

After the adjustment: ▼

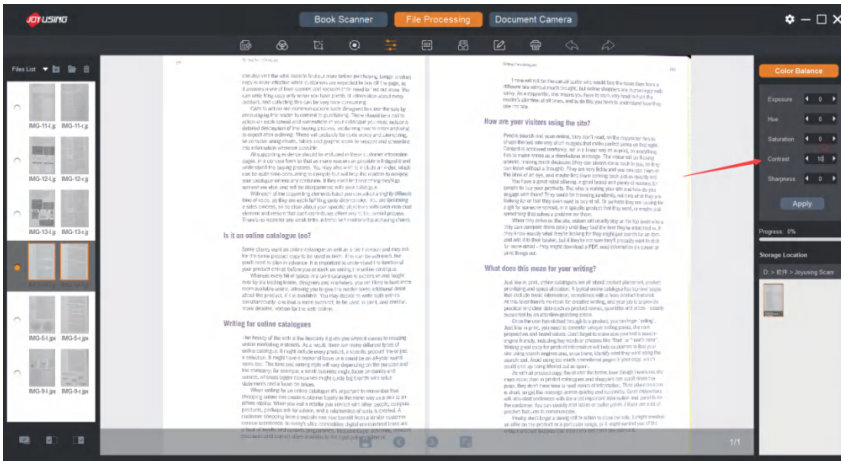


Document Output

The ABBYY OCR SDK recognizes the text on the images and saves them in different editable document formats, such as Word(OCR), Excel(OCR), PDF, PDF(OCR), TXT(OCR).


How to do?

- Select the language
- Select the document format to be output
- Click Start to pop out the file saving path and file name
- Start to work after confirmation
- Showing Progress 100%, the document is output successfully

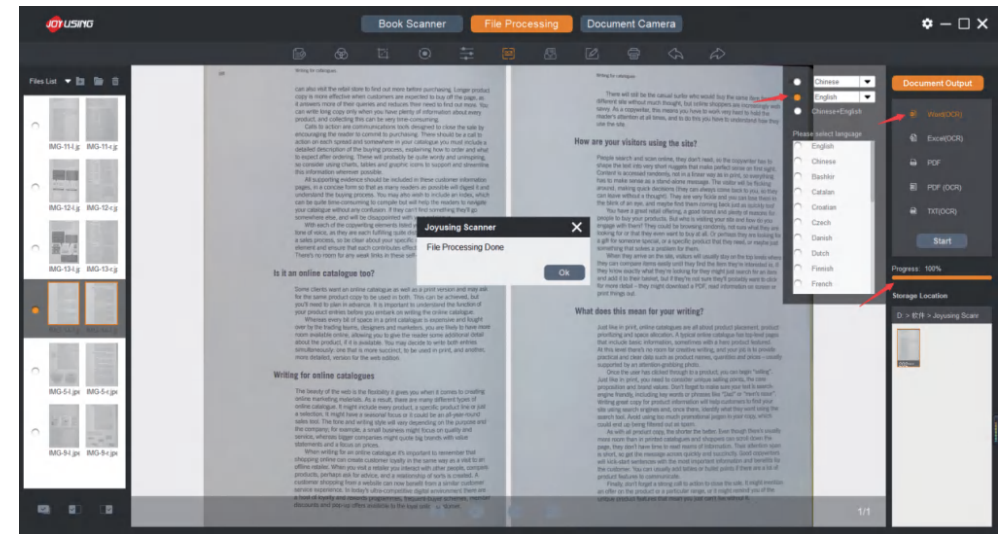


Unified Format

Enable to background settings, including size(forma A3 or A4) , DPI, color. Vertical mode and horizontal mode are available for both content page and background page.

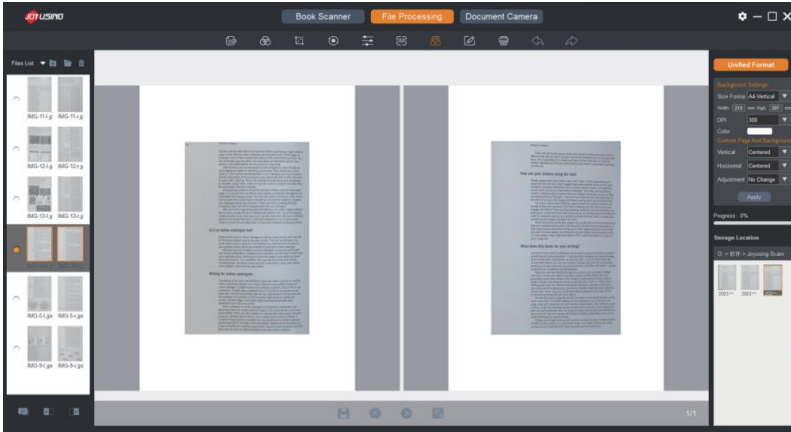


For example, the background page is A4, horizontal, and black, and the content page is centered. The setting picture is as follows:

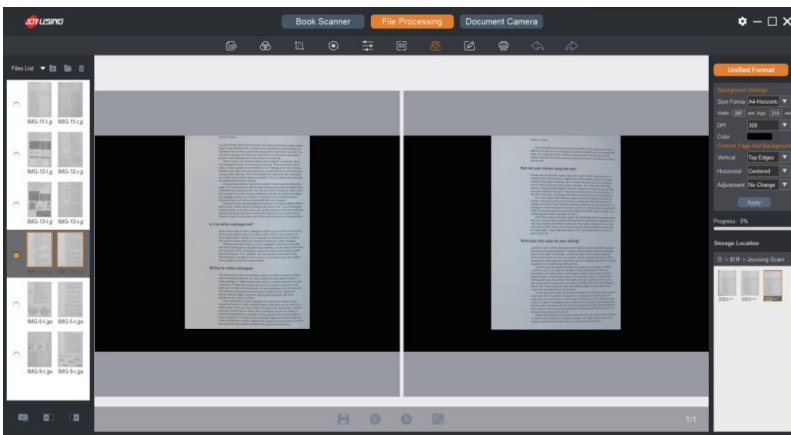

Rename


The selected file can be renamed;
File Naming rules: Filename (6 characters) + serial number (4 characters)
For multiple files: The serial number can be increased automatically, also even and odd numbers can be increased.

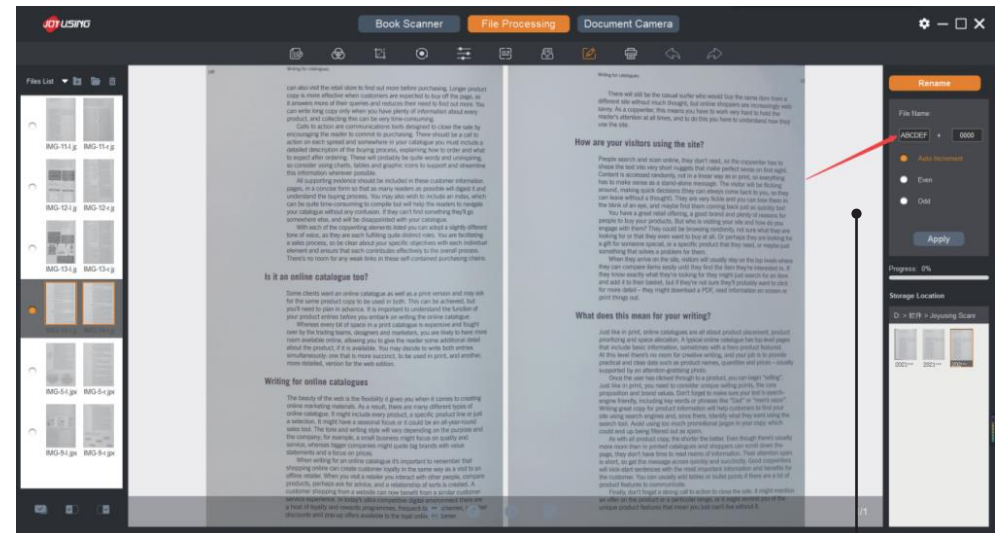



Batch Print

Use your printer from computer to print the selected document.

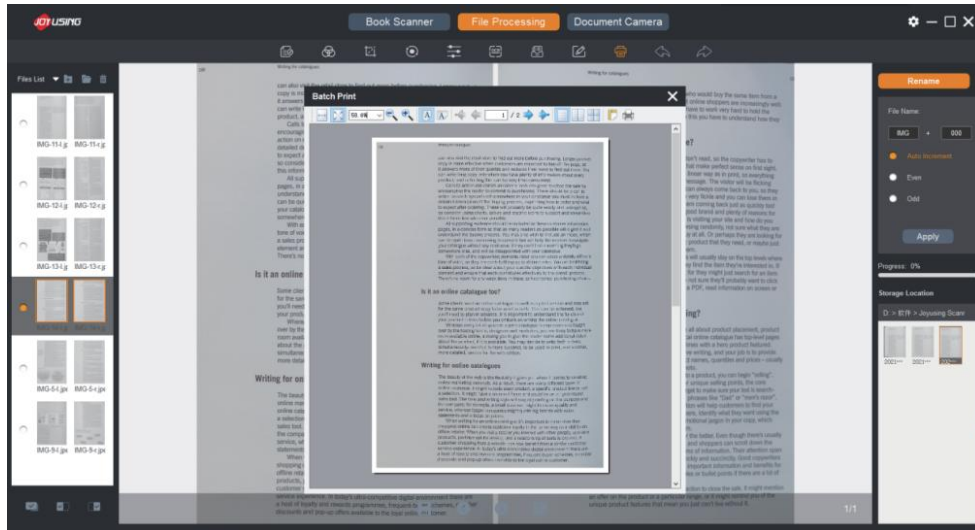


Undo and Redo

Not having been saved, the document could undo the last 5 steps.

▶ 3.3.2 Batch Saved & Batch Delete

When you confirm the batch processing, the toolbar at the bottom will change from unavailable (gray) to optional (white)

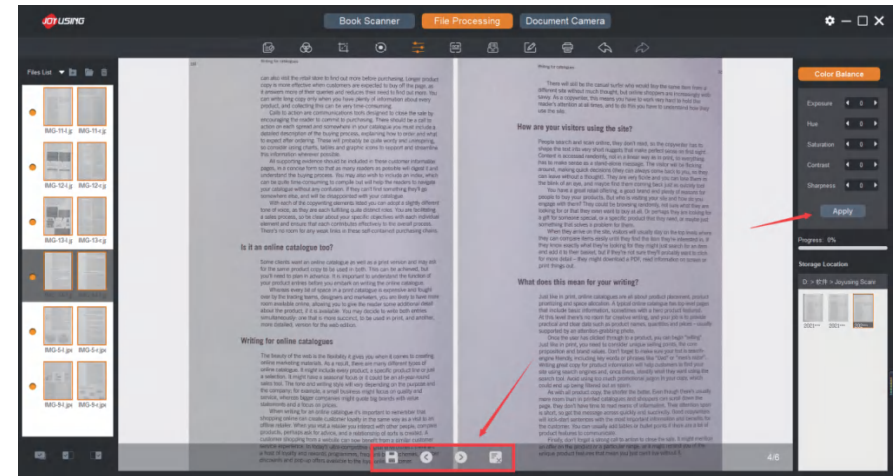

When you finish the batch processing, please click the button to save all the previous images to a folder. (Creating a new file will not cover the source file)



To preview the selected previous image.




To preview the selected next one image.



To cancel all the unsaved batch processing documents.


▶ 3.3.3 File Saving Path for Batch Processing

The file path saved by batch processing is consistent with that specified in the Settings. Click the preview folder, and the prompt box will pop up to ask you whether to open the new folder or not. Then click OK to proceed with the operation.

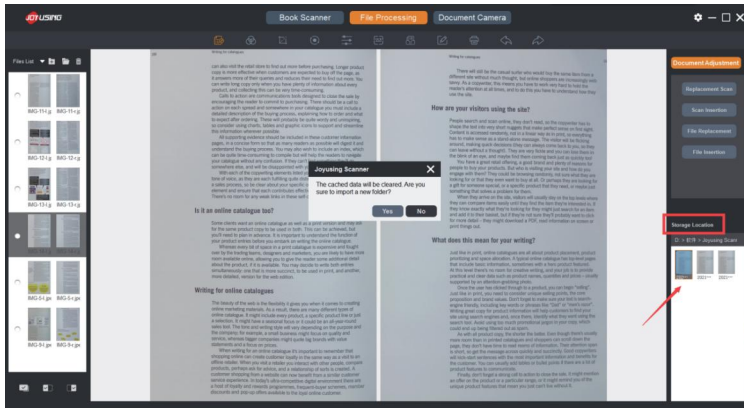

▶ 3.3.4 File Preview

A file preview box on the left displays a thumbnail preview of scanned or imported folders here.

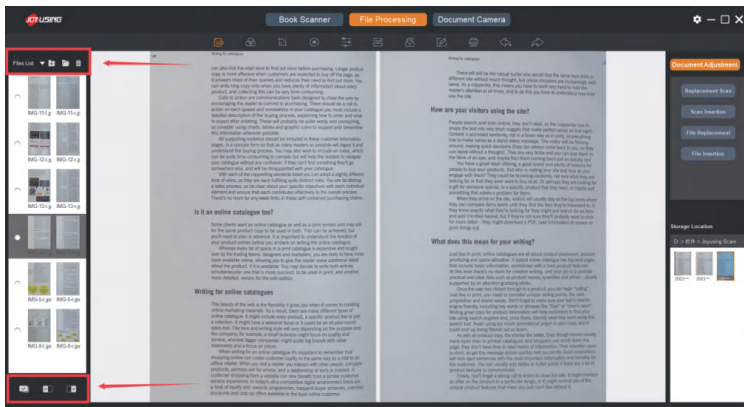





Files List ▼	File preview selection contains file list and book list		Add local files
	Open the file saving path		Delete the selected files
	Select all		Select all on the left page(only for books list)
	Select all on the right page(only for books list)		

3.4 Book Scanner

Scanner Interface: Thumbnail of scanned files come out on the left, and the real-time preview screen is in the middle, while the functional area is right on the right (Color mode, scan mode, scan Settings, scan mode).




▶ 3.4.1 Color Mode Functions

<ul style="list-style-type: none"> Color Mode 	Color mode: The scanning result is consistent with the real object.
<ul style="list-style-type: none"> Stamp Mode 	Stamp mode: The scanned seal will be more prominent and the color will be more obvious.
<ul style="list-style-type: none"> B&W Mode 	B&W mode: Qualified with background purification to purify paper yellow bottom, dirty page, and black edge, which makes document scanning results more clearly.
<ul style="list-style-type: none"> Gray Mode 	Gray mode: Make the scanning output grey.

▶ 3.4.2 Scan Mode Functions


Document Mode

Scanning documents are equipped with a function of automatical trimming based on the assistance of a soft mat. (Note: the soft mat is required)

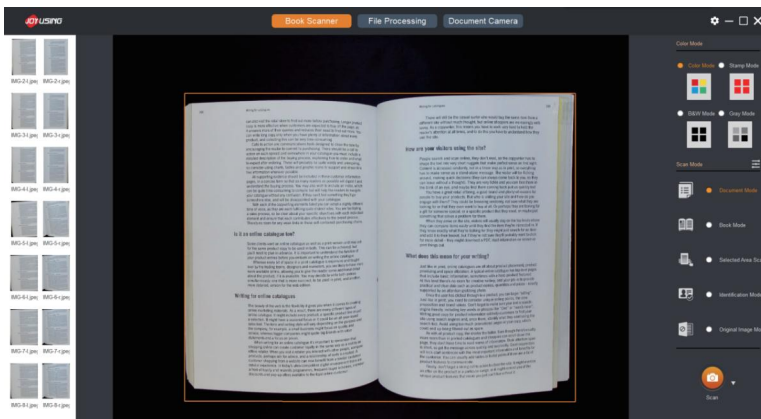

Book Mode


When scanning books, the preview interface will come out with an auxiliary line in the middle. Please aim the center of the scanning book to the line. After scanning, the file will automatically generate left and right pages.

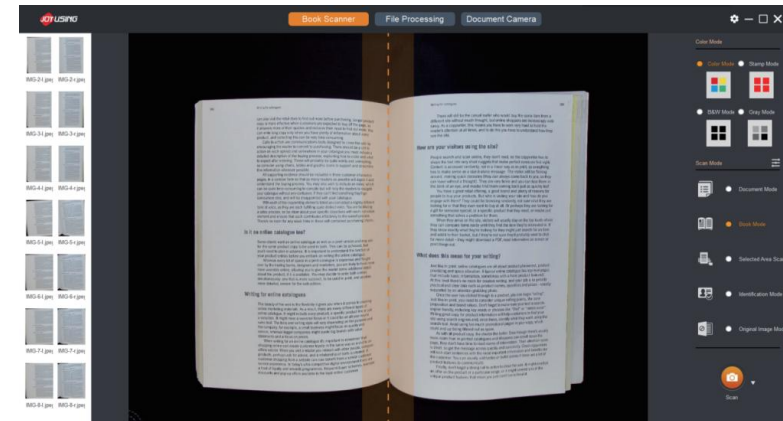

Selected Area Scan

Select what you want to scan







Identification Mode

Certificate scanning also has the function of automatic trimming. For example, finished one side ID card scanning, it will pop up a prompt to reverse the back of the certificate to continue scanning. All finished, the front and back scanned images will automatically be synthesized on a whole picture.


For example, Here is a business card scanning. (Please place your identification card face up and continue scanning)

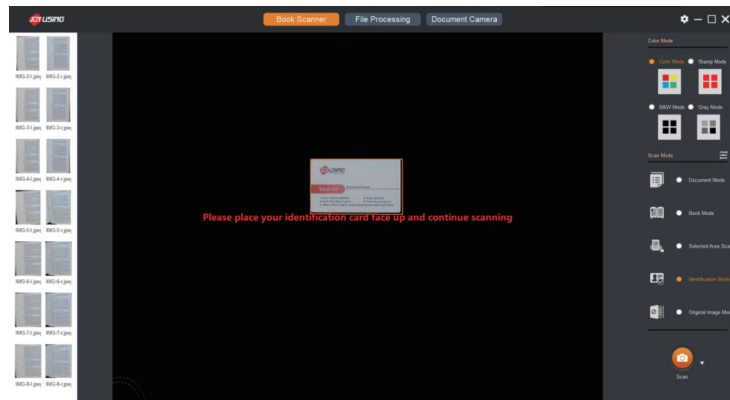

Face down scanning ▼

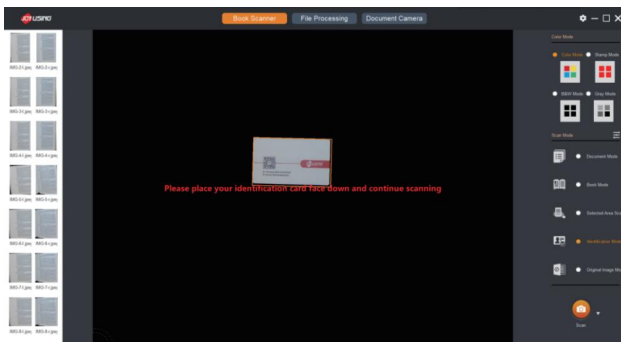


To synthesize and show both together ▼




Original Image Mode

Original scanning is to the authentic images without any processing.

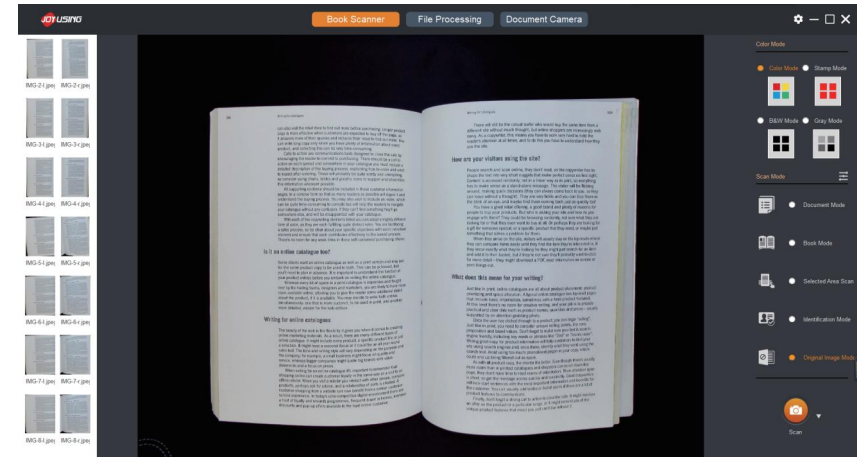

► 3.4.3 Scanning Settings



It is able to set resolution, book mode, identification mode, document mode.

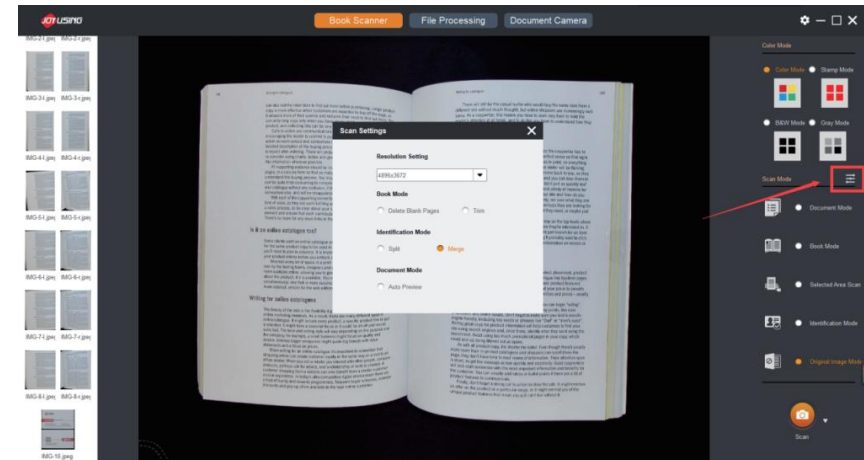

► 3.4.4 Scan Mode


Three options for you: Manual scan, auto scan, timing scan



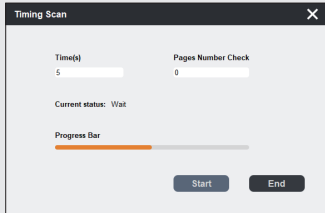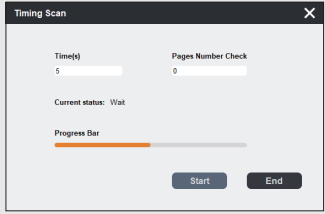



<p>● Manual Scan</p>	<p>Just click it to scan.</p>
<p>● Auto Scan</p>	<p>Once select the auto scan, the selection box will pop up. You can set the sensitivity and view the number of scanned pages.</p> 
<p>● Timing Scan</p>	<p>Timing scan will allow you to set the interval scan time and the number of scanned pages.</p> 



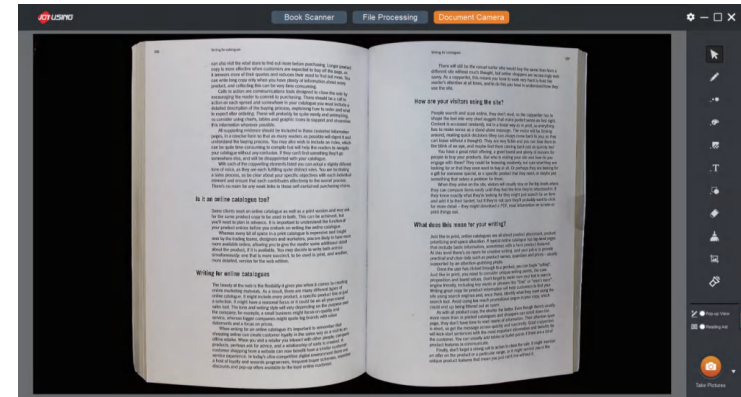













3.5 Document Camera

You can preview the camera image in real-time, also can use the annotation tool to annotate.





► 3.5.1 The Annotation

	<p>Select</p>	<p>The details of video preview can be moved.</p>
	<p>Brush</p>	<p>You can annotate the previewed image in the video.</p>
	<p>Thickness</p>	 <p>Select the corresponding one to adjust the size of the pencil.</p>


	Colour	Select the corresponding one to adjust the color of the pencil. 
	Transparency	The scroll bar makes the pencil and transparency adjustable. 
	Text	Write down the text description for the preview images. 
	Graphics	Select the graphics you need to insert the screen for a better explanation. 
	Eraser	The annotations on the image can be erased, and the scroll bar can resize the eraser. 
	Clear All	You can clear out all annotations on the image. 
	Screenshots	With a screenshot, you can pull the border to adjust freely. 
	Spotlight	The focus of different shapes can be set, and the size can be adjusted by pulling the edge, including Circle, square left&right screen, up&down screen. 

► 3.5.2 Pop-up View & Reading Aid

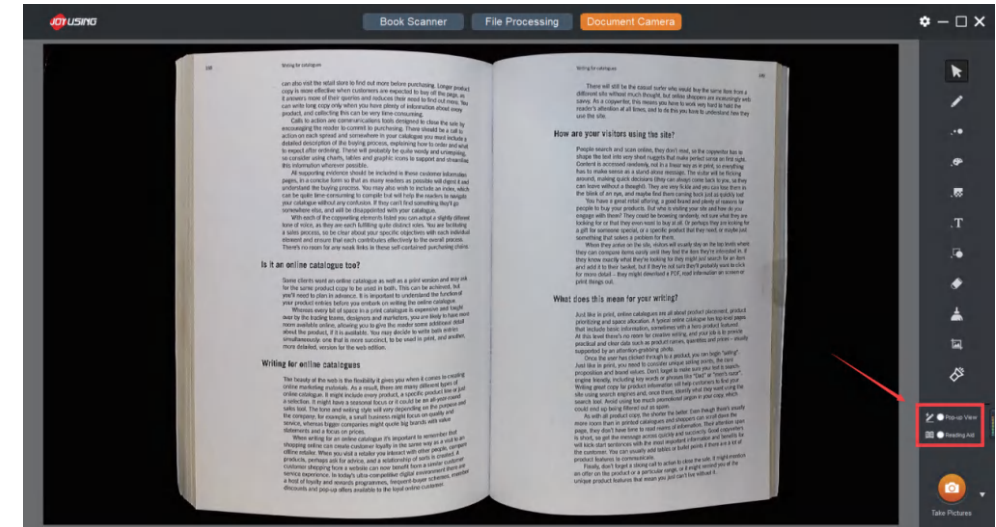


Pop-up View

It is a kind of flash mode, and the annotation content will be automatically eliminated after three seconds on the screen.




Reading Aid


After clicking it, a horizontal reading aid line will come out. When you click the left mouse button, and a magnifying glass appears. While right-clicking the highlighter effect appears (right-click three times are available and the highlighter range will be doubled for each click.) For Example, magnifying glass & highlighter

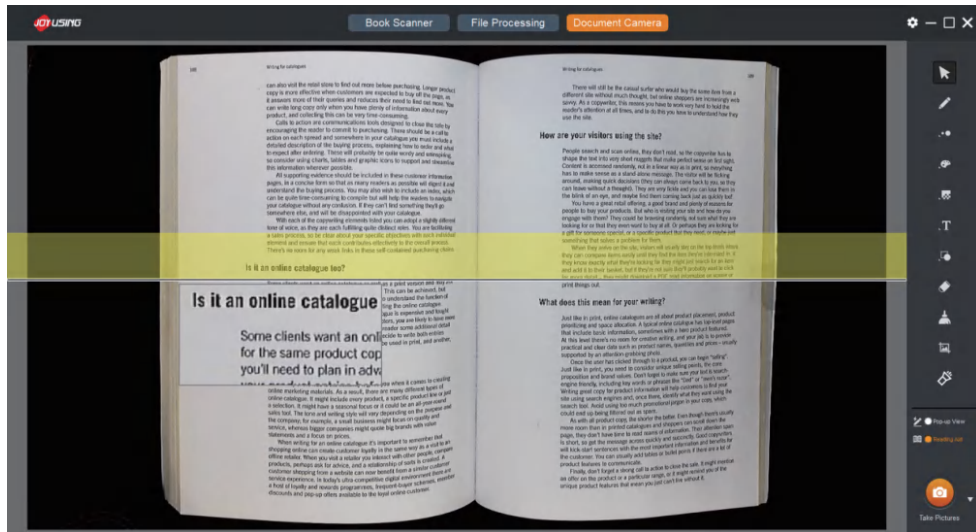


For example, The following is horizontal focus mode. The right-click is to enlarge the focus range a total of three times.

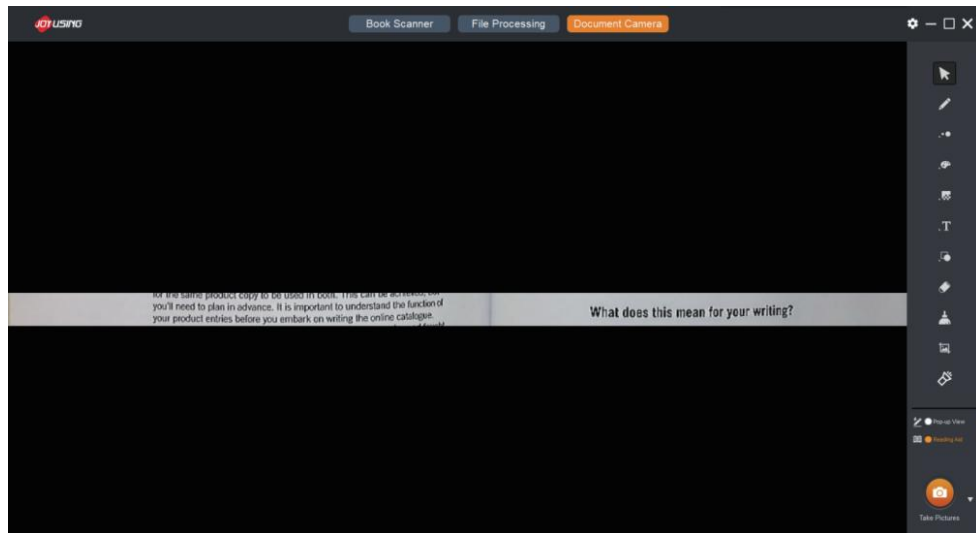


► 3.5.3 Take Pictures & Screen Recording


Next to the photo button, the inverted triangle, in the lower right corner can be selected to take pictures and record the screen by clicking. The storage location can be set in the Settings 

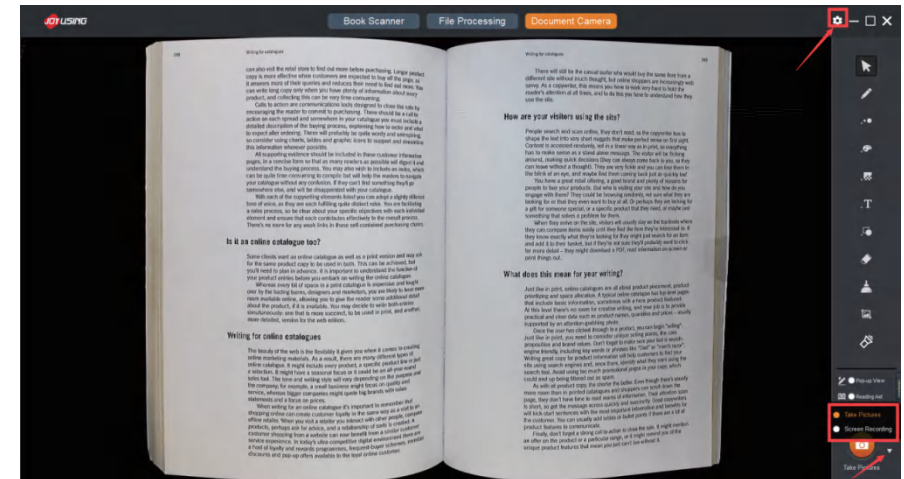


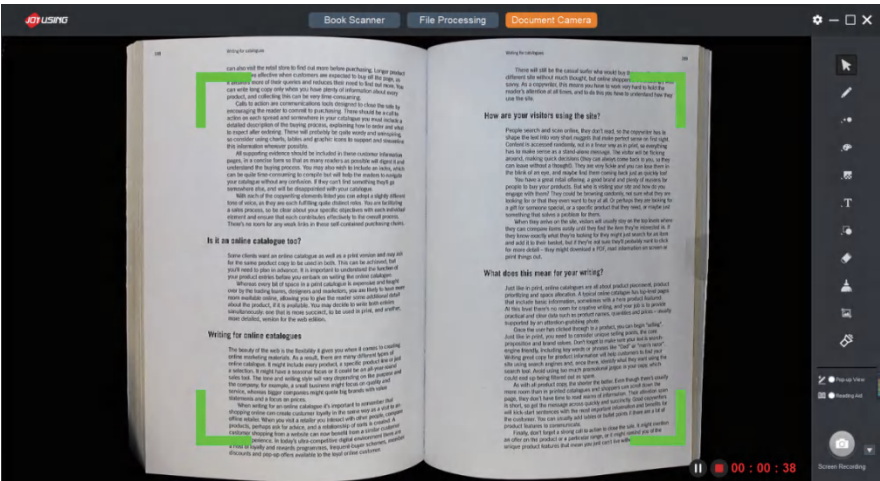
"Take Pictures Successfully" will pop up after clicking to take pictures.

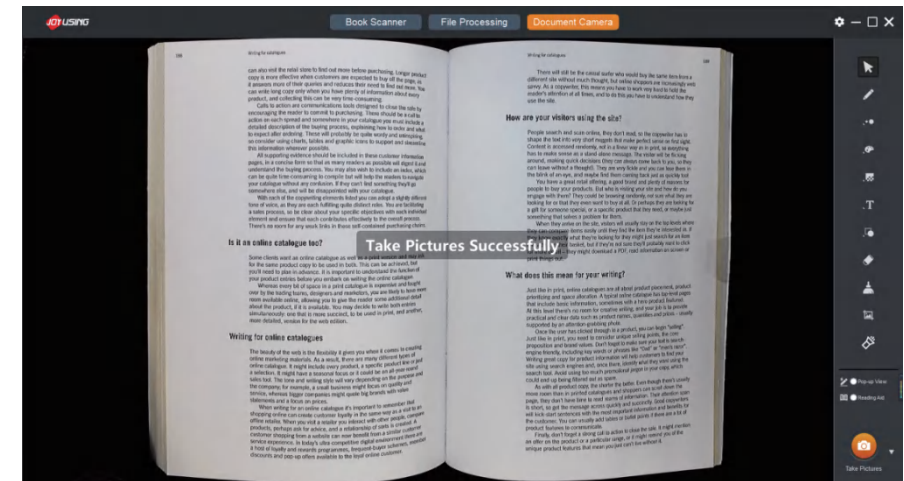


When clicking the screen recording, the screen will pop up a selection box that can be selected according to the existing resolution and pull the frame to determine the range manually.

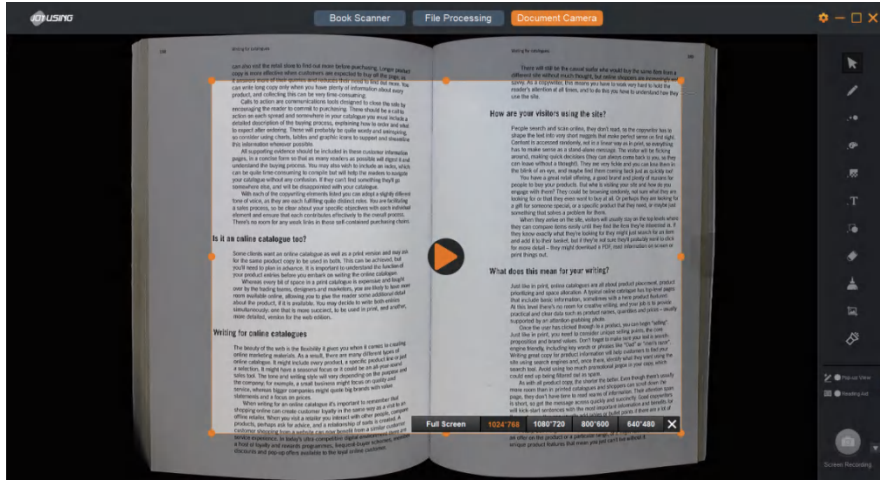

Click the icon  to start, and there is a screen recording time prompt in the lower right corner. When the mouse moves to the time, the pause/stop button of screen recording appears.




Click the stop button to stop screen recording, and the prompt box will pop up to display the storage location and open files or directories.

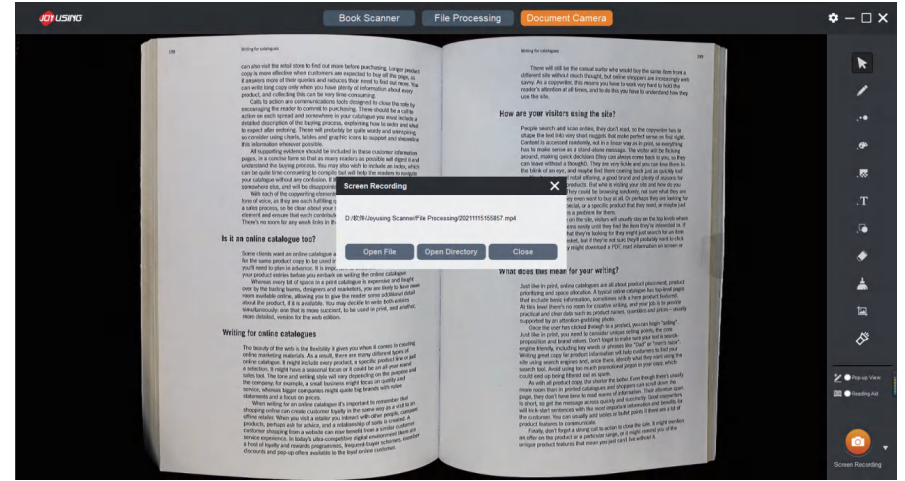


3.6 Settings

Software Settings contain so much information, such as software information, language settings, format selection, storage path, watermark settings, etc.

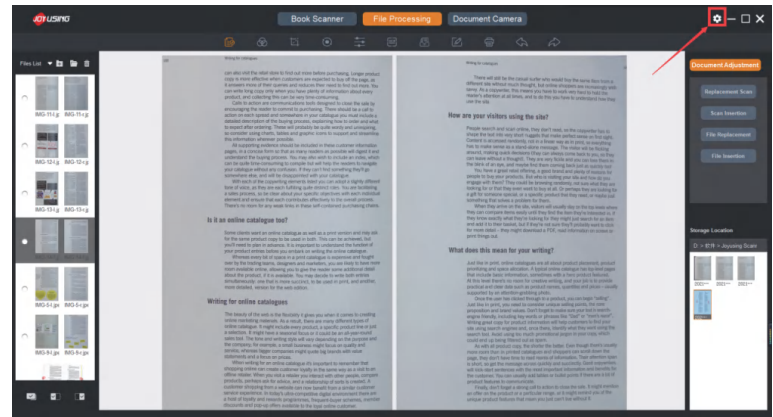


▶ 3.6.1 About

Click the stop button to stop screen recording, and the prompt box will pop up to display the storage location and open files or directories.

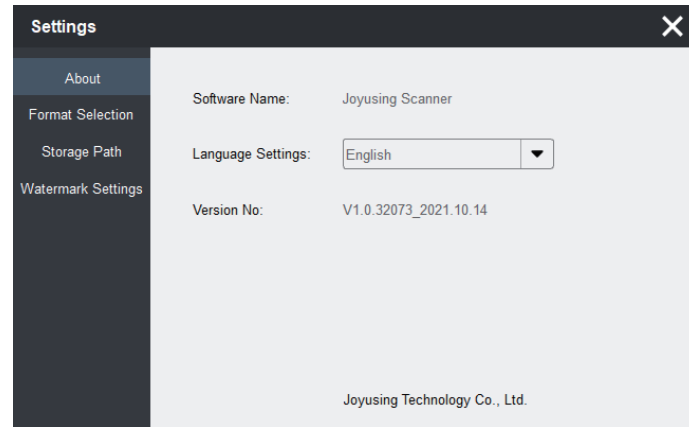


▶ 3.6.2 Format Selection

Many settings can be available, including DPI, image format, video format MJPG compression rate. MJPG compression rate setting works for JPEG compression. For example, the original picture is 2M/piece. After setting the compression rate to 50%, the picture becomes 1M/ piece.

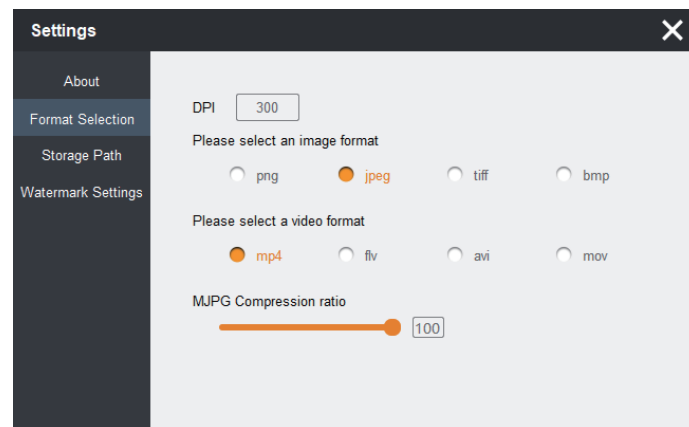


▶ 3.6.3 Storage Path

File name and the storage path of the image/video can be set. (The file name will be sorted during the scanning if the scanning settings has been finished before scanning)

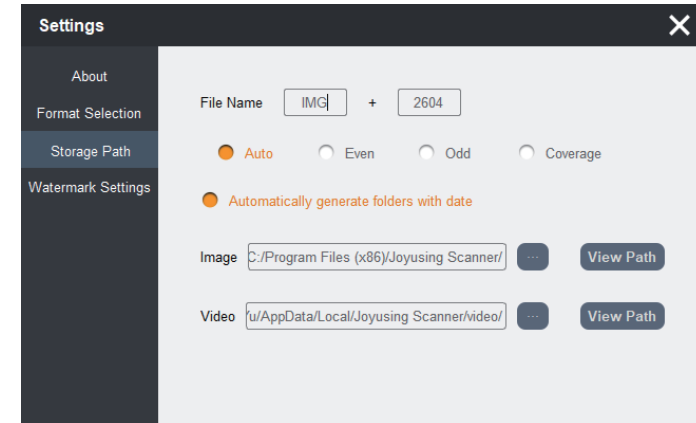


▶ 3.6.4 Watermark Settings


Using a watermark and adding text/date(system time) is available. You can adjust the axis to preview the watermark position.

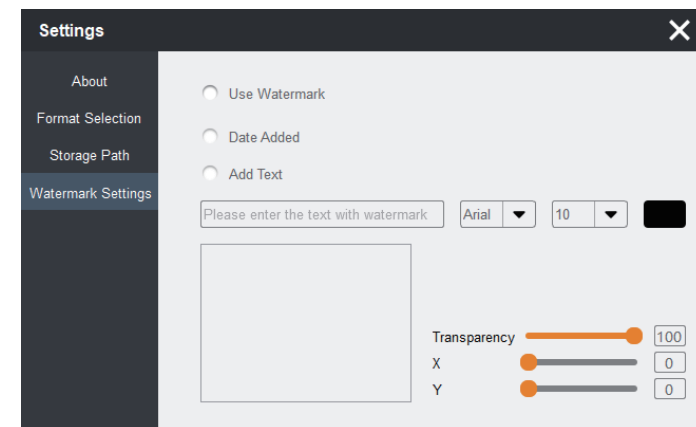

For example, adding text “JOYUSING”, and the transparency is set up to 100.

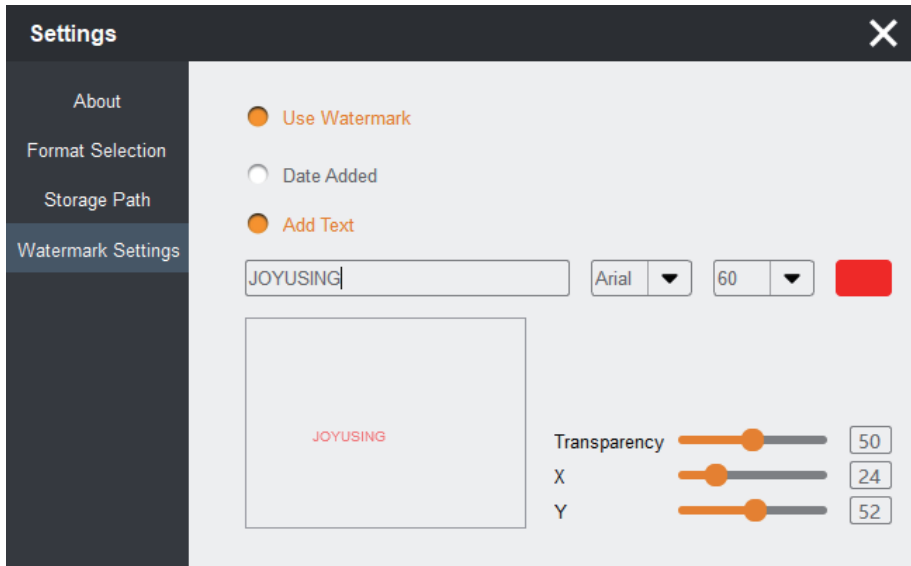

Shown as follows:

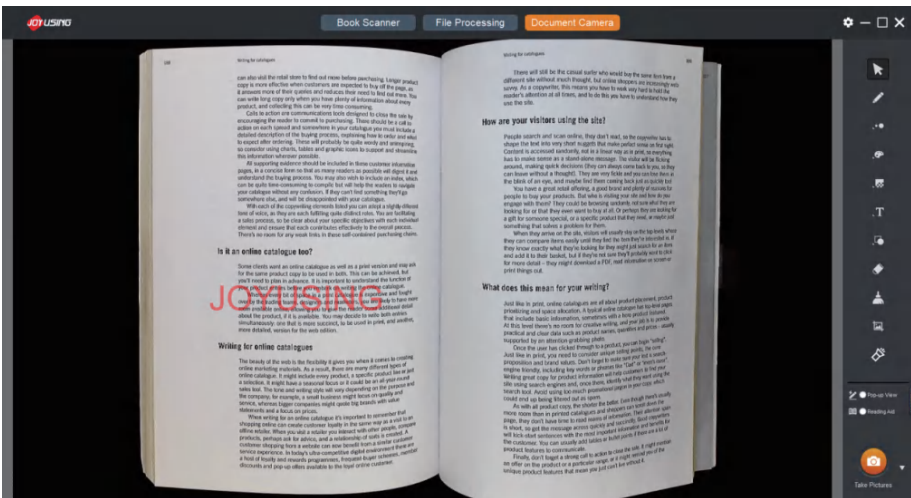

4. FAQ

► 4.1. Scanning problem of auto-flatten

The equipped soft mat is required when scanning comes. In addition, the mat should fall within the scope of the scanning range. Otherwise, the auto-flatten won't work well.

► 4.2. Fail to open the software

Firstly, please confirm if the PC can identify the device. If not please make sure that the data line is connected to the right interface, or any damage happens. If the PC can identify the device but still fails to open the software please turn off the computer antivirus software.

If you have any more questions, please contact us.
Email: Support@joysusing.com